


# 6.0 Concrete Repairs

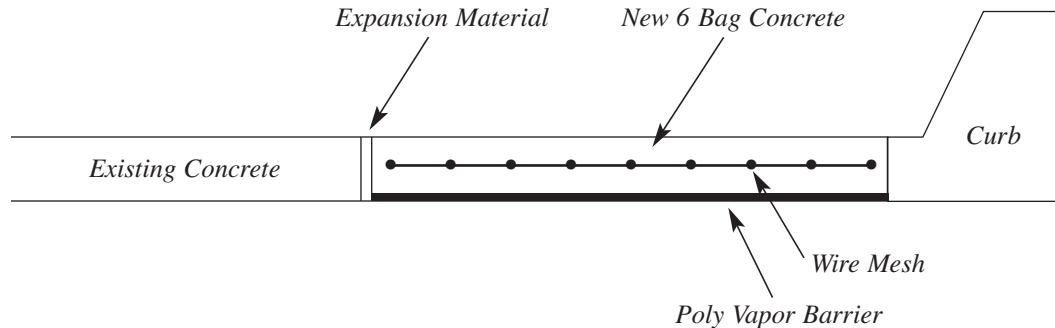

## CONCRETE REPAIRS

1. Mark out areas to be repaired.
2. Jackhammer or sawcut neatly around the perimeter of each area. Dig out the full depth of the deteriorated concrete and haul the debris off site.
3. Thoroughly compact the subbase with vibratory tamper.
4. Set forms. Install 6 x 6, #10 welded wire mesh and poly vapor barrier as necessary. Install fiber expansion material as necessary (every 30 feet on average for sidewalk).
5. Pour new concrete using 6 bag (3000 psi) mix to the specified thickness and on grade.
6. Trowel surface level, score joints and apply broom finish.
7. After concrete has set properly, strip all forms and backfill behind the disturbed area, using dirt from on-site if available.
8. Same format to be followed on removal and replacement of concrete curb and gutter or header curbs.



### Parking Lot Specialists

162 Lafayette Avenue • Laurel, Maryland 20707

Phone 1-866-670-1234 • Fax (301) 725-8869

[www.chamberlaincontractors.com](http://www.chamberlaincontractors.com)

